


DESPIECE BM-68

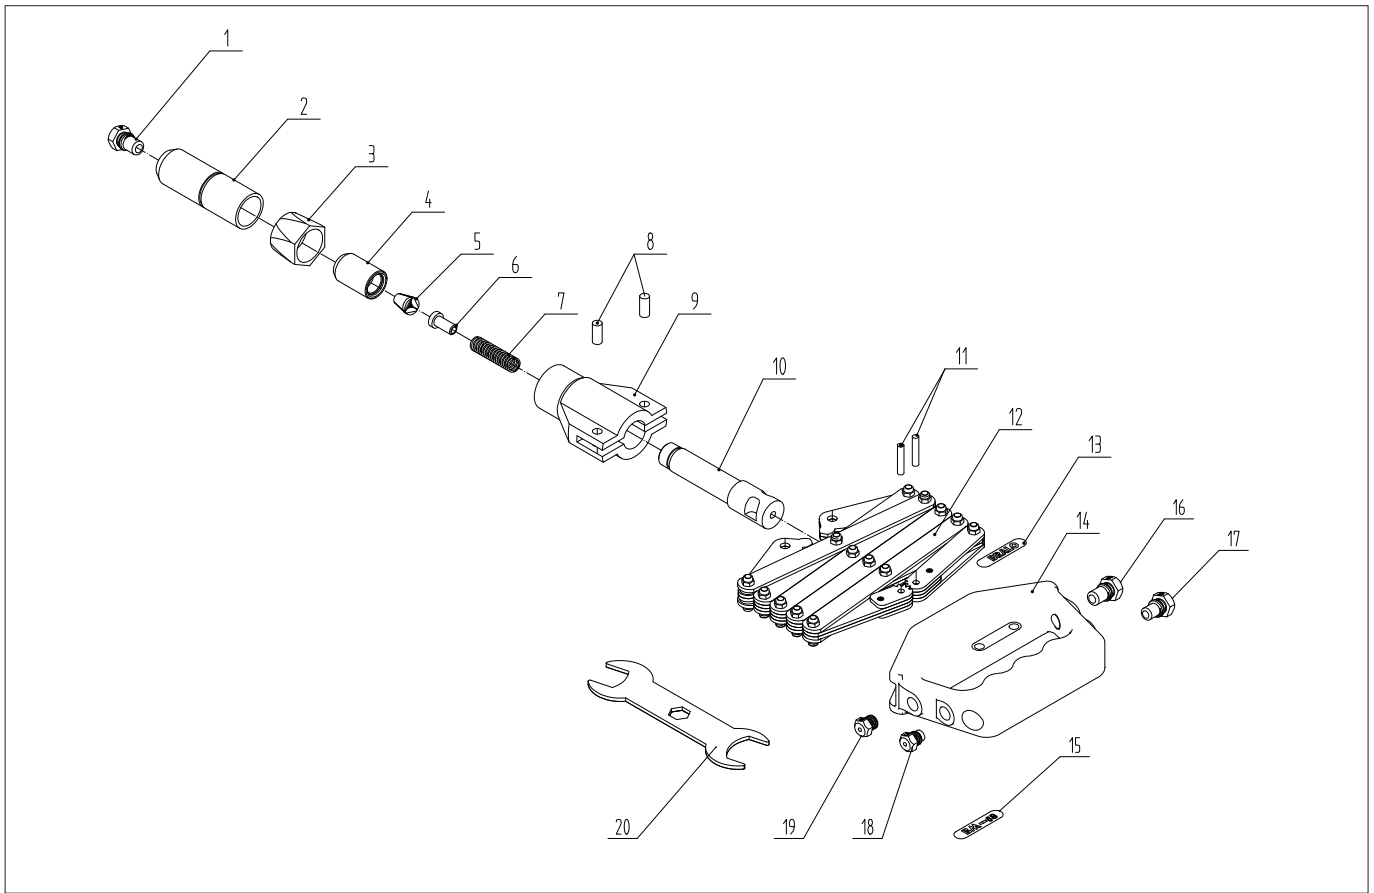

| BOQUILLA N° | ALU/ACERO ALU/INOX | ALU/ALU | ACERO | INOX | COBRE | HARDGRIP |
|-------------|--------------------|-----------|-----------|------------------|-----------|--------------|
| B | 3,0 - 3,2 | 3,0 - 3,2 | 3,0 - 3,2 | | 3,0 - 3,2 | 3,2 acero |
| C | 4,0 | 4,0 | 4,0 | 3,0 - 3,2 4,0 | 4,0 | 3,2 inox |
| D | 4,8 - 5,0 | | | | | 4,0 |
| E | 6,0 * | 4,8 | 4,8-5,0 | 4,8-5,0 | 4,8 | 4,8 |
| F | 6,4* | | 6,0-6,4* | 6,0-6,4* | | 6,0* |

| N° | CÓDIGO | DENOMINACIÓN |
|----|-------------|---------------------------|
| 1 | 05BM0068001 | BOQUILLA F 6.4 |
| 2 | 05BM0068002 | PORTA BOQUILLA |
| 3 | 05BM0068003 | TUERCA AJUSTE |
| 4 | 05BM0068004 | PORTA MORDAZAS |
| 5 | 05BM0068005 | JUEGO MORDAZAS |
| 6 | 05BM0068006 | EMPUJADOR MORDAZAS |
| 7 | 05BM0068007 | MUELLE EMPUJADOR MORDAZAS |
| 8 | 05BM0068008 | PASADORES CUERPO |
| 9 | 05BM0068009 | CUERPO |
| 10 | 05BM0068010 | EJE PRINCIPAL |
| 11 | 05BM0068011 | PASADORES FUELLE |
| 12 | 05BM0068012 | FUELLE |
| 14 | 05BM0068014 | EMPUÑADURA |
| 16 | 05BM0068016 | BOQUILLA B 3.2 |
| 17 | 05BM0068017 | BOQUILLA C 4.0 |
| 18 | 05BM0068018 | BOQUILLA D 4.8/5.0 |
| 19 | 05BM0068019 | BOQUILLA E 6.0 |
| 20 | 05BM0068020 | LLAVE BOQUILLAS |

*Para un uso prolongado se recomienda utilizar la remachadora BM-164